

British Audio



Owners Manual

Congratulations on purchasing your VIBE enclosure. Please read this manual in order to fully understand how to get the best results from this product and ensure that all advice on how to look after the product is followed.

Thank you for buying VIBE, we hope you enjoy listening to your product as much as we enjoyed creating it.

Attention



An aftermarket audio amplifier will place an additional load on the vehicles charging system.

Most modern vehicles have sufficient capacity in the charging system as not all the electrical components of the vehicle will be switched on at once.

Check the fuse rating of the amplifier and use this as the peak current requirement.

Generally the continuous current draw will be a third of the peak current.

Warning

During the normal use of this enclosure, the heatsink may become very hot. Please do not touch during or immediately after use

Please ensure that when installing this product the heatsink will not come into contact with any materials that may be damaged by heat such as upholstery or plastics.

Limited Warranty

All VIBE products carry a full 12 month warranty, valid from the date of the original receipt and proof of purchase. The online warranty card should be completed within seven days of the original purchase date. The original receipt and packaging should be retained for this twelve month period. If the product develops a problem any stage during the warranty period, it should be returned to the point of purchase in it's original packaging, and complete with no items missing. If the store is unable to repair the product it may have to be returned to VIBE.

A full description of VIBE's warranty information can be found on our website:

www.vibeaudio.co.uk

What Is Not Covered

- Damage to product due to improper installation.
- Subsequent damage to other components.
- Damage caused by exposure to moisture, excessive heat, chemical cleaners and / or UV radiation.
- Damage through negligence, misuse, accident or abuse. Repeated returns for the same fault may be considered abuse.
- Any cost or expense related to the removal and / or re-installation of the product.
- Damage caused by amplifier clipping or distortion.
- Items repaired or modified by any unauthorised repair facility.
- Return shipping on non defective items.
- Products returned without a returns authorisation number.
- · Damage to product due to use of sealant.

International Warranty

Contact your international VIBE dealer or distributor concerning specific procedure for your country's warranty policies. www.vibeaudio.co.uk/warranty

Warning

VIBE equipment is capable of sound pressure levels that can cause permanent damage to your hearing and those around you. Please use common sense when listening to your audio system and practice safe sound

Copyright

All Confent included in this manual such as text, graphics, logos, icons, images and date, are the property of Midbass Distribution Limited ty VIBE. Technologies Limited (herein referred to as "VIBE", "us" or "we") and its affiliate or their content and technology providers, and are protected by United Kingdom and International copyright laws. All rights reserved. VIBE TV, VIBE Arcade, Bass Box, Optisound, Cinesound, BlackArt, BlackBox, Space, LiteAir, SLICK, BlackDeath, Bubonic, Reaper, Anti-VIBE, FastPlug, BlackHole, OB69, VIBE Tutrob Port, VIbe Turbovent, Pressure Board, Super Driver, VIBE Pulse, VIBE Power, VIBE Digital, VIBE Mak QP lugs, Ferrite Loaded, VIBE Solid Core, VIBE CVC, VIBE FLAT, ICC, Bass Enhance, Bass Enhance, ABass, SpeedBass, PowerBass, N-Wedge, Box Grip, ARBSS, Supercar Series and all stylised representations of product names, or the abbreviations of product names, as logos are all trademarks of VIBE. Graphics and logos are trademarks or trade dress of Technologies L1d or its subsidiaries. VIBE's trademarks and trade dress may not be used in connection with any product or service that is not VIBE's, in any maner that is likely to cause confusion among customers or in any manner that disparages or discredits VIBE. All other trademarks not owned by VIBE or its subsidiaries that appear in this manual are the property of their respective owners, who may or may not be affiliated with, connected to, or sponsored by VIBE or its

TO THE FULLEST EXTENT PERMITTED AT LAW, VIBE IS PROVIDING THIS MANUAL AND ITS CONTENT ON AN "AS IS" BASIS AND MAKES NO (AND EXPRESSLY DISCLAIMS ALL) REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THIS MANUAL OR THE INFORMATION, CONTENT, MATERIALS OR PRODUCTS INCLUDED IN THIS MANUAL INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN ADDITION, VIBE DOES NOT REPRESENT OR WARRANT THAT THE INFORMATION CONTAINED IN THIS MANUAL AS SUBJECT TO CHANGE WITHOUT NOTICE. VIBE RECOMMEND CAUTION WHEN LISTENING TO MUSIC REPRODUCED THROUGH VIBE EQUIPMENT IN CAPABLE OF PRODUCTIONS SOUND AND SOUND PRESSURE LEVELS THAT CAN PERMANENTLY DAMAGE HEARING OF YOU AND THAT OF OTHERS. FOR SAFE AND ENLOYABLE LISTENING, THE SOUND SHOULD BE CLEAR WITHOUT DISTORTION AT A COMPORTABLE VOLUME BY USING ANY VIBE FOURMENT, VIGHT OF THE VIBE THAT OF ANY VIBE FOURMENT OF THE VIBE AND THE SAFETY OF OTHERS WHEN LISTENING TO MUSIC AT HIGH VOLUMES THROUGH EQUIPMENT YOU HAVE PURCHASED. USE OF ANY VIBE EQUIPMENT TO AN STRUCK SHE TO TAKE FULL RESPONSIBILITY FOR YOUR OWN SAFETY AND THE SAFETY OF OTHERS WHEN LISTENING TO MUSIC AT HIGH VOLUMES THROUGH EQUIPMENT YOU HAVE PURCHASED. USE OF ANY VIBE EQUIPMENT TO STRUCK SHE FOR THE STRUCK OF CHARGE STRUCK SHE AND THE SAFETY OF OTHERS WHEN LISTENING TO MUSIC AT HIGH VOLUMES THROUGH EQUIPMENT YOU HAVE PURCHASED. USE OF ANY VIBE EQUIPMENT TO STRUCK SHE OF THE OTHER SHE OTHER SHE OF THE OTHER SHE OTHER

Mounting Guidelines


Your VIBE enclosure is designed with a swift installation routine in mind.

Please mount the enclosure in a dry location on a solid surface.


NEVER mount the enclosure upside down as this will cause the amplifier to over heat and will eventually damage the amplifier.

Before fixing the enclosure in place please ensure that there is sufficient air flow around the exterior of the casing, at least two inches is sufficient to allow effective cooling.


Power Connections

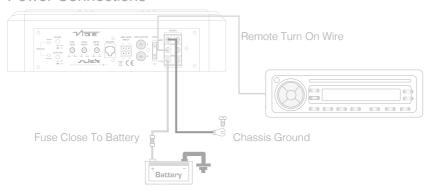

Low Level Input

 

High Level Input

 

NOTE: When using high level input it is not necessary to connect the remote turn on wire. Do not connect both high level and low level input at the same time.

Power Cable

- At least 10 gauge cable should be used for the power connection to the amplifier.
- The power cable should be taken directly from the battery. Rubber grommets should be used when passing through any bulkheads to prevent the cable from becoming chaffed or cut.
- It is vital that a fuse / circuit breaker (of at least equal value to the one fitted in the amplifier) is placed inline with the power cable and is no further than 18 inches away from the battery.
- Please ensure that the fuse is not fitted until the entire installation procedure is complete.

Ground Cable

- At least 10 gauge cable should be used for the ground connection to the amplifier.
- The amplifier ground should be connected directly to the chassis of the vehicle, to bare metal
- The cable length should be kept to an absolute minimum.
- It is not recommended that you connect the ground cable to the vehicles seatbelts anchor point.


Auto Turn On (High level Input Only)

- The SLICK C10 features an auto turn on circuit called Autosense.
- This circuit allows the amplifier to switch on and off without a remote turn on wire when using high level input, for low level input (RCA) it will still be necessary to connect the remote turn on wire from the headunit.
- When the connected source (headunit) is turned on the amplifier will turn on automatically, after the connected source (headunit) is turned off the amplifier will shut down (Auto on button needs to be engaged)

RCA Cables

- Please take extra care when running these cables from the source to the amplifier.
 Ensure that they are placed away from all items that can generate any interference, wiring harnesses etc.
- It is recommended that the RCA cables should be run on opposite sides of the car
 to the previously installed power cables if possible, to avoid the cable picking up
 interference.

Terminals And Connections

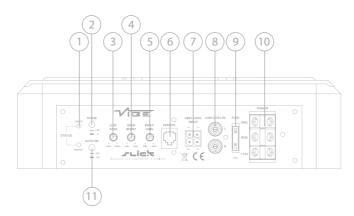

1. Power / protect LED

f the amplifier is operating normally, the GREEN LED will illuminate

If the amplifier is in protection mode the RED LED will illuminate.

2. Phase switch

This switch is used to set the phase of the amplifier and is adjustable between 0° (off) or 180° (on).

3. Low Pass Filter (LPF)

This control is used to set the crossover frequency for the amplifier when LPF is selected. The frequency is adjustable between 50Hz and 150Hz.

4. Bass boost control

This control is used to add bass boost to the amplifier centred at 45Hz and is adjustable between 0 and +12dB.

5. Gain control

This control is used to match the input signal of the source to the amplifier. See the setup section for more details

6. Remote level control port

For connection to the supplied remote level control for the amplifier.

7. High level input

Used to connect to the speaker output of your source (head unit) to the amplifier.

8. Low level input

Used to connect to the low level (RCA) output of your source (head unit) to the amplifier.

9. Fuse

Replace with only the same value ATC fuse: 25A

10. Power terminals

Used to connect DC power to the amplifier. See the power connections section for more details.

11. Auto turn on switch

This switch is used to set the auto turn on of the amplifier if using high level input.

Set Up Section

To correctly set the gain control of the amplifier to match that of the source (headunit) use the following setup routine:

- Turn the gain control to minimum on the amplifier.
- Ensure the bass boost is set to 0 dB.
- Set all crossovers on the headunt (if applicable) to flat and both bass and treble to zero.
- Turn up the source (headunit) to approx 3/4 volume.
- Very slowly turn up the gain on the amplifier until distortion can be heard in any of the speakers or until the volume reaches an uncomfortable listening level when this is reached turn the gain control down slightly.

The gain control is now set.

For a subwoofer it is recommended that the crossover is set to low pass and the frequency is set to match that of the speakers specifications, or your preferred frequency - this is usually around 60 - 120 Hz

By using the crossovers correctly you will not only lengthen the life of your speakers but you will also get better performance from them.

To optimise your setup seek the advise of a professional installation engineer or visit your local VIBE audio dealer.

Specification

Model	SLICKC10A-V0
Driver	SLICK10S
Туре	Active bass enclosure
Peak/RMS Power	540W/180W
Impedance	4Ω
Dimensions (H x W x D)	2.9" x 10.2" x 13.6" (73mm x 260mm x 345mm)
Configuration	2nd order acoustic suspension
Enclosure Type	Slim Fit Bass Enclosure
Recommended Amp	Powerbox Bass 1 (Active)

UK Technical Enquiries

Call 09067031420

Calls cost 50p per minute. Call costs correc at date of publication (01/02/12) Hours of business 9.00am - 5.30pm GMT Monday - Friday.All calls are recorded for training purposes. MIDBASS Distribution,PO Box 11000, B75 7WG.

International Technical Enquiries

For international technical support please contact the distribution agent for your country.

Please visit www.vibeaudio.co.uk/contact for more details.



~Lick

Designed and engineered in England





www.vibeaudio.co.uk



www.youtube.com/vibeaudio



www.facebook.com/vibeaudio



www.twitter.com/vibecaraudio

